


DREMEL®

MODEL: 300

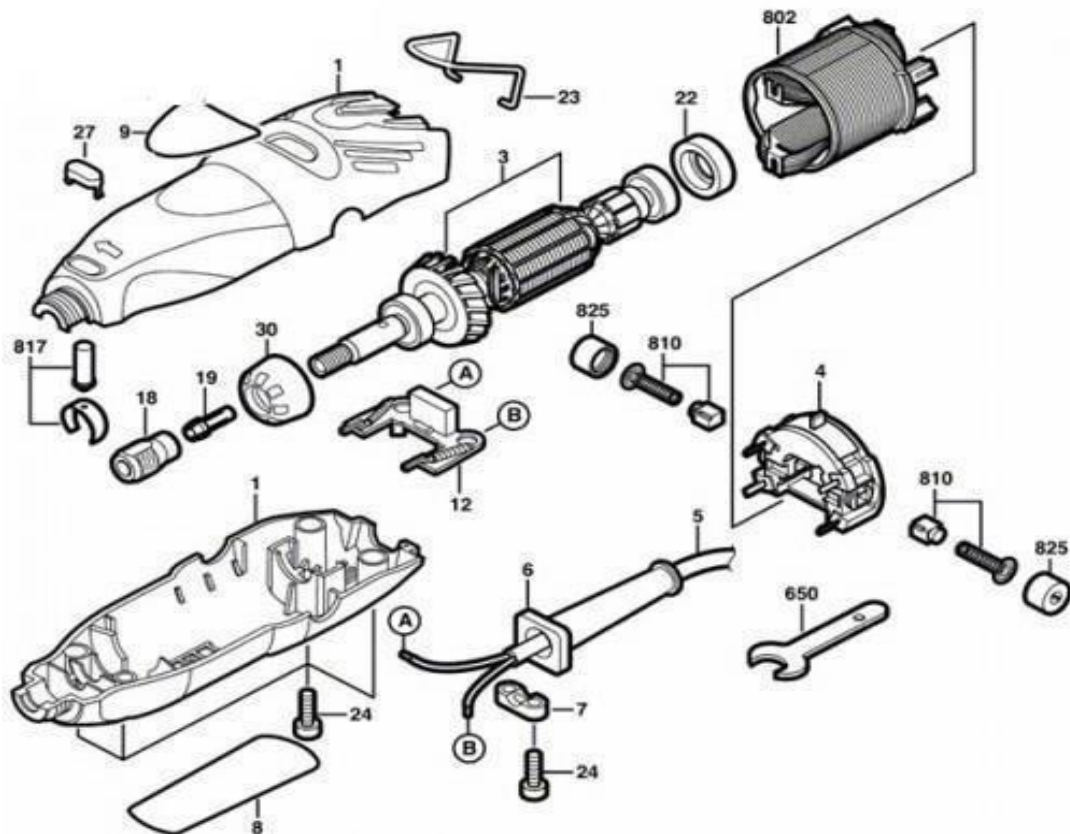

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	2610004592	Housing Assembly	22	2615297373	Insulator
3	2610941201	Armature	23	2610925720	Cover
4	2610938877 Deleted by Dremel	Mains Switch	24	2615294035	Cross Recessed Head Screw
5	2610999103	Power Cord	27	2610925721	Cover
6	2610360176	Grommet	30	2610919754	Nose Cap
7	2615650007	Cable Clip	650	2610930692	Chuck Wrench
8	2610938874 Deleted by Dremel	Nameplate	802	2615298792	Field

9	2610938874 Deleted by Dremel	Label	810	2615298790	Carbon Brush Set
12	2615302683	Condenser	817	2610009839	Armature Lock
18	2610014582	Nut (Also 2615297355)	825	2610913683	Sealing Cap
19	480	1/8 Collet			