


DREMEL®

MODEL: 3000

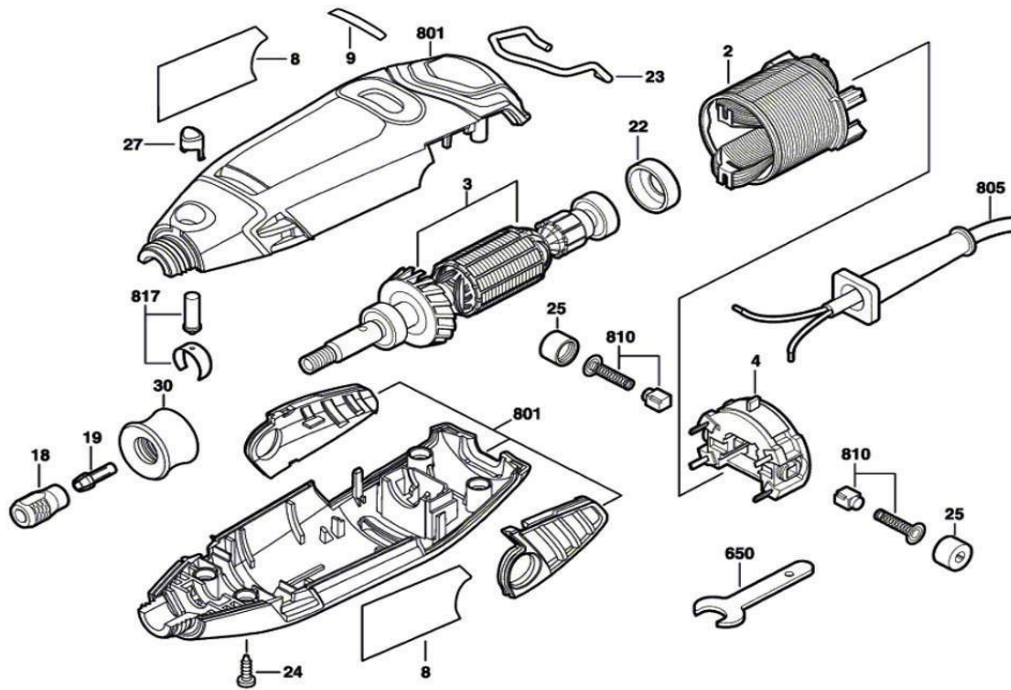

ITEM NO.	PART NO.	DESCRIPTION
2	2615298792	Field
3	2610009848	Armature
4	2610021221	Switch
5	2610999103	Power Cord
6	2610360176	Grommet
7	2615650007	Cable Clip
8	2610018919 Deleted By Dremel	Label
12	2615302683	Condenser
18	2610014582	Nut (Also 2615297355)
19	480	1/8 Collet

22	2615297373	Insulator
23	2610013891 Deleted by Dremel	Tool Rack
24	2615294035	Cross Recessed Head Screw
25	2610009826	Brush Cover
26	2610315386	Screw ST3
27	2610013890	Button
30	EZ495	Nose
650	2610930692	Chuck Wrench
801	2610009845	Housing Assembly
810	2615298790	Carbon Brush
817	2610009839	Shaft Lock (Also 2615297356 & 2610913818)