


DREMEL®

MODEL: 400

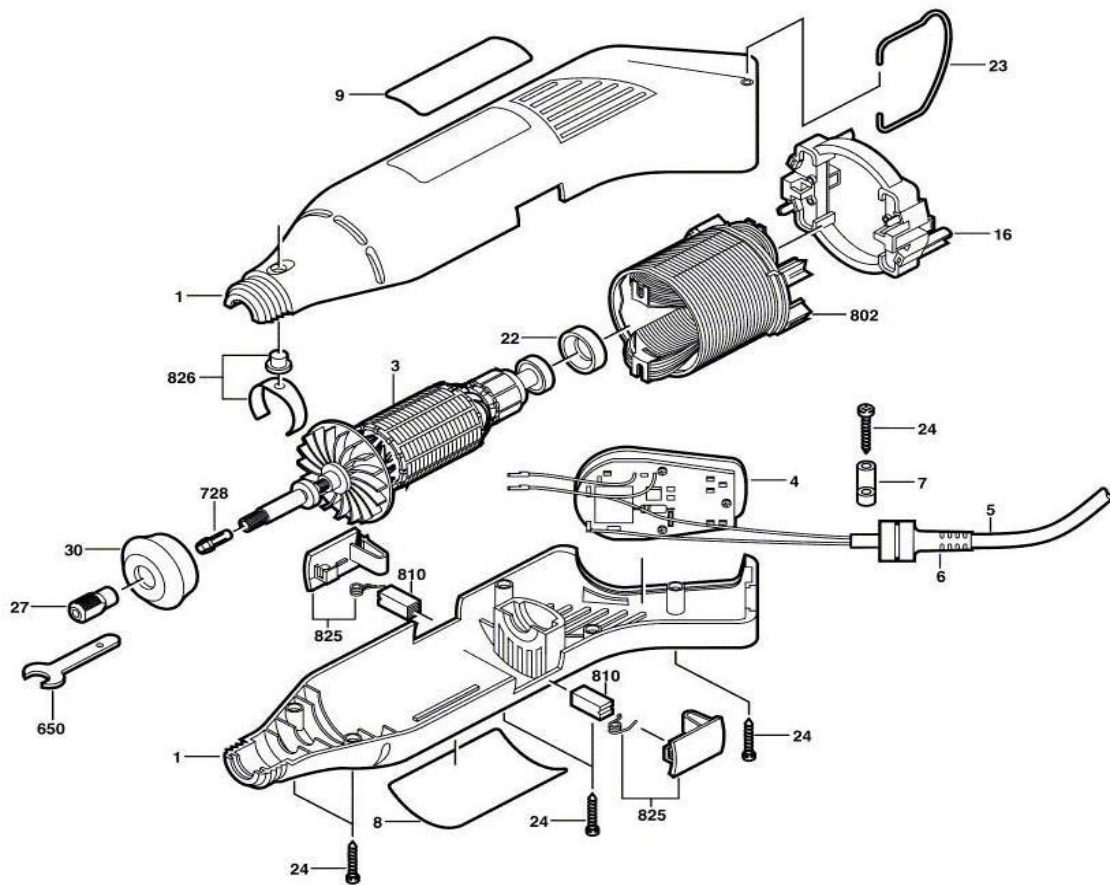

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	2610928647	Housing Set	24	2615294035	Cross Recessed-Head Screw
3	2610907942 Deleted by Dremel	Armature	27	2610014582	Nut (Also 2615297355)
4	2610928648 Deleted by Dremel	Control Unit	30	2610913684	Sealing Cap
5	2615302694	Power Cord	650	2610930692	Chuck Wrench
7	2615650007	Cable Clip	728	480	1/8 Collet
8	2610928661 Deleted by Dremel	Name Plate	802	2615298792	Field
9	2610928662 Deleted by Dremel	Label	810	2610907940	Carbon-Brush Set

16	2615302530	Brush Holder	825	2610928650 Deleted by Dremel	Brush Cover
22	2615302505	Damping Rubber	826	2615302807	Armature Lock
23	2615294043	Pickup Clip			