


DREMEL®

MODEL: 7020

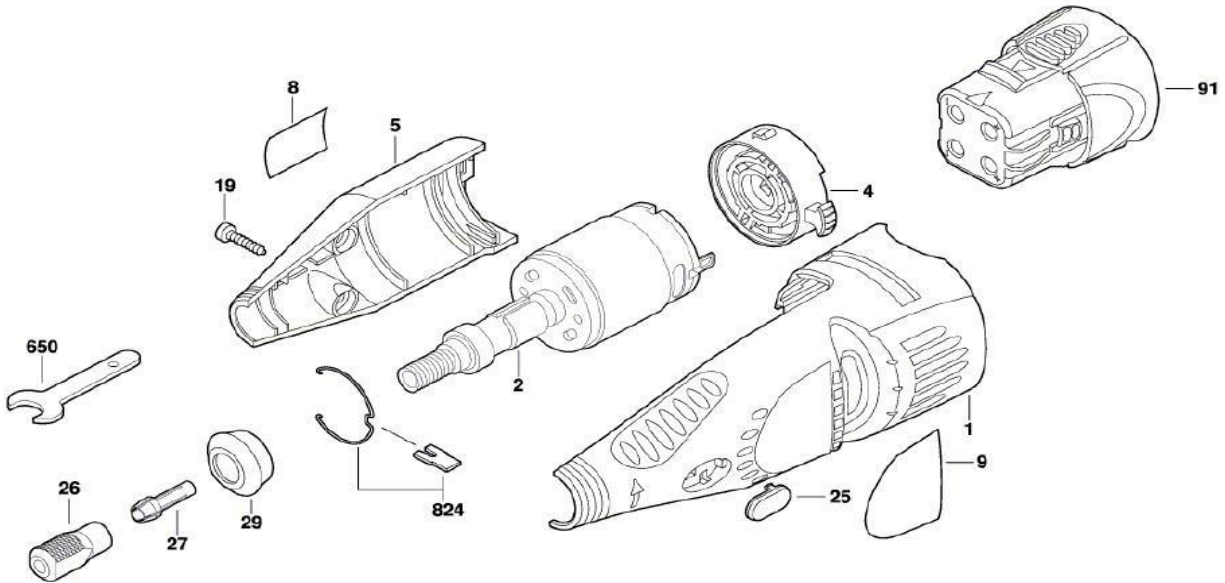

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	2610011879 Deleted By Dremel	Housing	26	2610014582	Nut (Also 2615297355)
2	2610916207	Motor	27		1/8 Collet
4	2610916208	Switch Assembly	29	480 2610011875	Cap
5	2610011877 Deleted By Dremel	Housing	91	1600A015NB Deleted By Dremel	Battery Holder
8	6082942G5N	Warning Label	650	2610930692	Wrench
9	2610046844	Label	824	2610917263 Special Order Only	Shaft Lock
19	2610347948	Screw			
25	2610916357	Cover			