


# DREMEL®

MODEL: 732

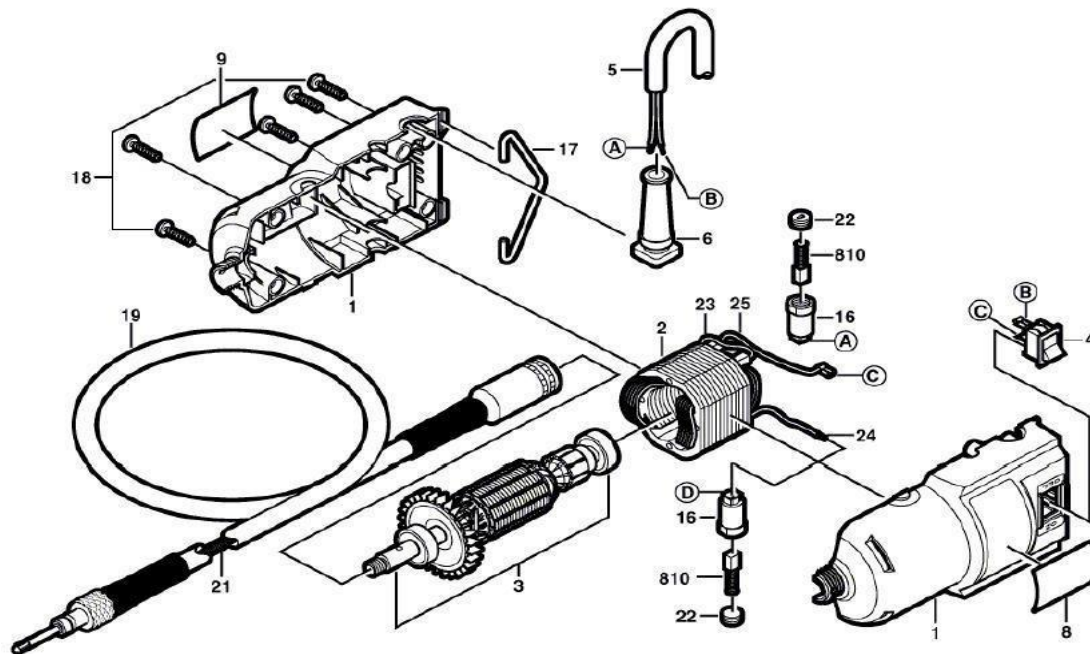

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	2615295061 Special Order Only	Housing	22	2615295064 Deleted by Dremel	Sealing Cap
2	2615295101 Deleted by Dremel	Field	23	2615038483 Deleted by Dremel	Power Supply Cord
3	2615295107 Special order Only	Armature	24	2615038445 Deleted by Dremel	Connecting Cable
4	2610910115 Special Order Only	Switch	25	2615038446 Deleted by Dremel	Connecting Cable
5	2615296838 Deleted by Dremel	Power Supply Cord	26	Deleted by Dremel	Parts Set
6	2610313327	Grommet	27	Deleted by Dremel	Capacitor Board
7	2610364033	Cable Clip	810	<a href="#">2615090935</a>	Carbon Brush Set

8	2615302901 Deleted by Dremel	Reference Plate			
9	2615296646 Deleted by Dremel	Nameplate			
16	2615295063 Deleted by Dremel	Brush Holder			
17	2615295075 Deleted by Dremel	Pickup Clip			
18	1619X00504	Screw			
19	2615295051 Deleted by Dremel	Flex Shaft Outer Casing			
21	2615295052 Deleted by Dremel	Lead Wire			