


# DREMEL®

MODEL: 800

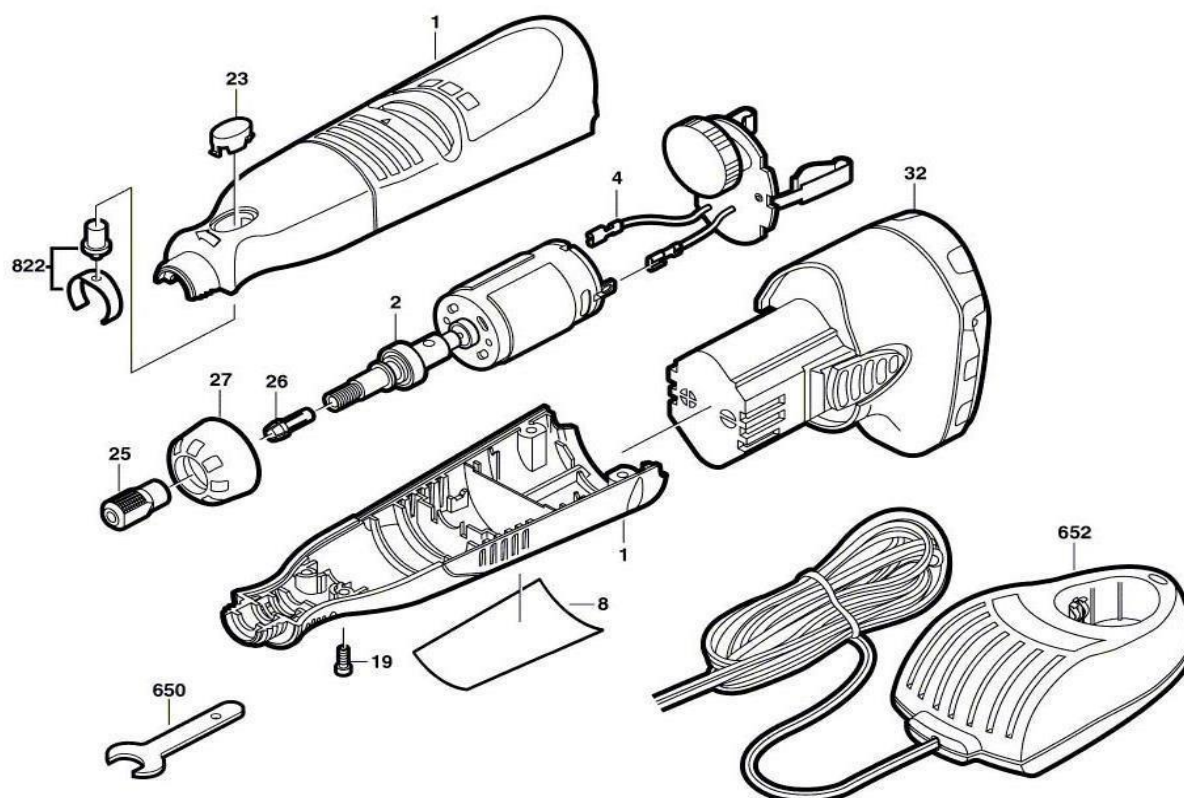

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	2610935571	Housing Assembly	27	<a href="#">2610919754</a>	Nose Cap
2	Deleted by Dremel	Motor	32	Deleted by Dremel	Battery
4	Deleted by Dremel	Speed Control Assembly	650	<a href="#">2610930692</a>	Chuck Wrench
8	2610943971	Name Plate	652	Deleted by Dremel	Charger
9	2610942177	Label	822	<a href="#">2610009839</a>	Armature Lock
19	2603490017	Torx Oval Head Screw 3x10			
23	2610919753	Cover			

25	<a href="#">2610014582</a>	Nut (Also 2615297355)			
26	<a href="#">480</a>	1/8 Collet			