


DREMEL®

MODEL: 8050

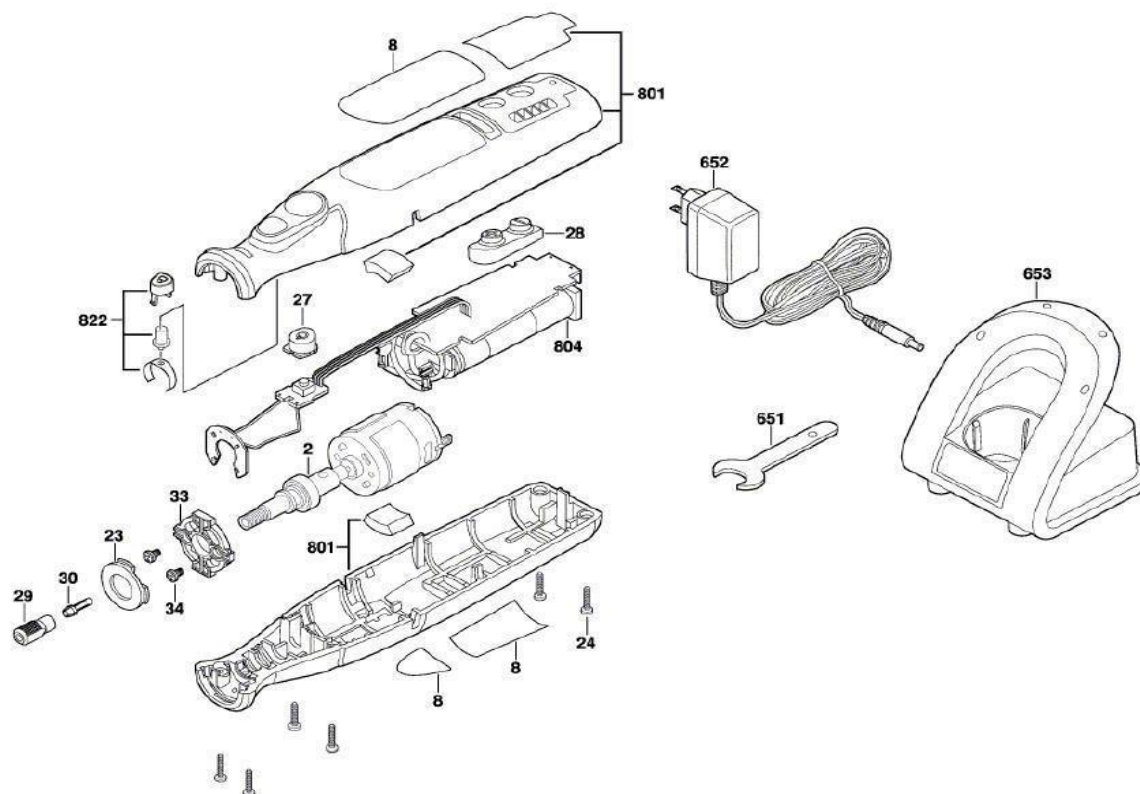

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
2	2610033427	Motor	651	2610930692	Chuck Wrench
8	2610035207	Label	652	2610033994	Charger Power Adaptor
23	2610031874	Lens	653	2610033979	Charger Base
24	1619X02572	Screw	801	160580657S	Housing
27	2610031876	Push Button	804	1600A003M9	Electronic Module
28	2610031877	Push Button	822	1600A003M8	Anti-Twist Lock
29	2610014582	Nut (Also 2615297355)			
30	480	1/8 Collet			
33	2610033160	Flange			
34	2910648880	Screw			