


DREMEL®

MODEL: 8220

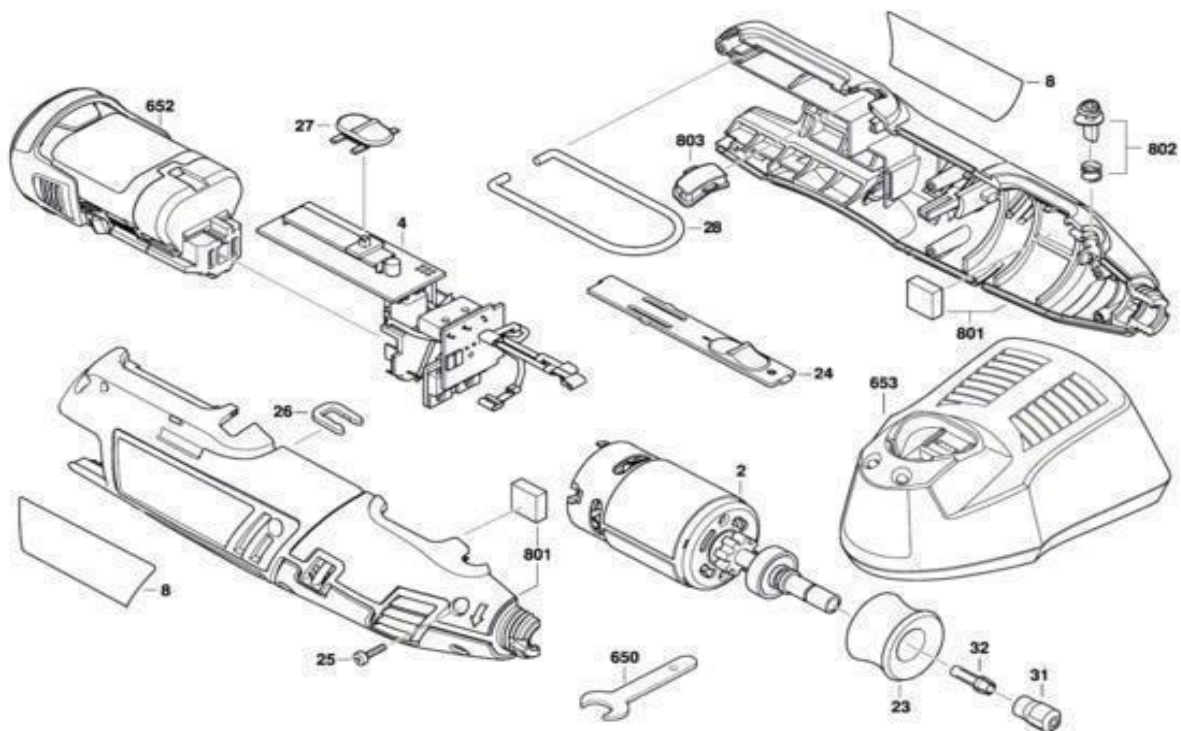

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
2	2610005460	Motor	650	2610930692	Chuck Wrench
4	2610021281	Electronic Assembly	652	1607A350H7	Battery
8	Deleted By Dremel	Nameplate	653	2607225689	Charger
23	EZ495	Nose Cap	801	Deleted By Dremel	Housing Assembly
24	2610005471 Special Order Only	Guide Lever	802	2610004610	Armature Lock
25	2610013397	Screw	803	2610011205 Deleted By Dremel	Housing Assembly
26	2609110537	Clip			

27	2610005472 Special Order Only	Spring Cap			
28	2610005473	Suspension Loop			
31	2610014582	Nut (Also 2615297355)			
32	480	1/8 Collet			