


DREMEL®

MODEL: MS20 Scroll Saw

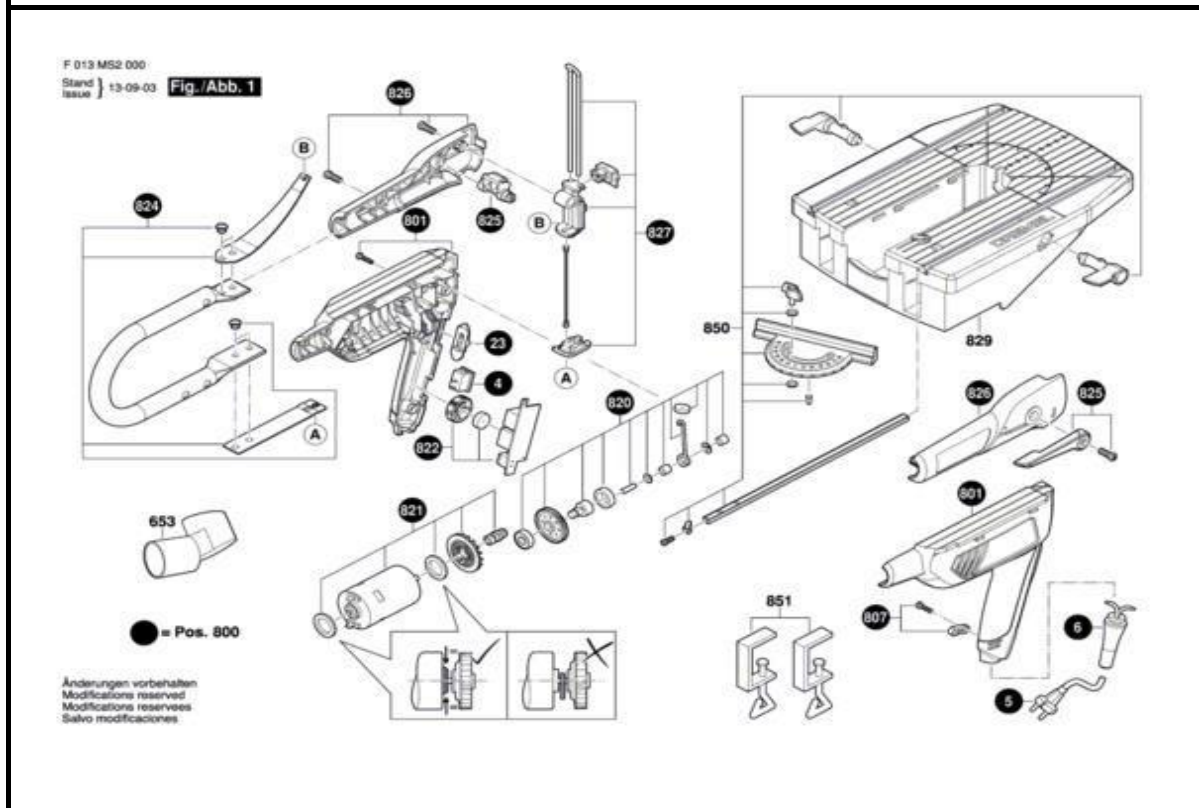

Item No.	Part No.	Description	Item No.	Part No.	Description
4	2610Z03714	Switch	824	2610Z03717	Bow Element
5	2610999103	Power Supply Cord	825	2610Z03718	Knob
6	2610Z03715	Cord Guard	826	2610Z03719	Upper Housing
23	2610Z03713	Switch Slide	827	2610Z03720	Guiding System
801	2610Z03721	Housing	828	2610Z03722	Knob
807	2610Z03716	Cable Clip	829	2610Z03724	Table
820	2610Z03710	Gear Unit	850	2610Z03723	Angle Attachment

821	2610Z03711	Motor	851	2610Z3725 Deleted By Dremel	Clamp
822	2610Z03712	Speed Governor			